

5913 and 5914 Bluetooth Adaptors for PC (USB) and Controller


Installation, Operation and Maintenance Setup Manual

2/24/2017

Distributed by:



888.858.3647 | relevantsolutions.com

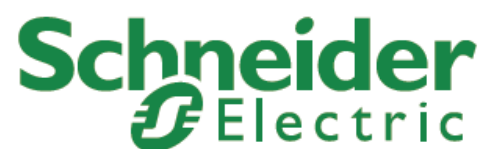

Copyright © 2014 - 2017 Schneider Electric Canada Inc.

All rights reserved.

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

Trademarks

Schneider Electric, ClearSCADA, SCADAPack, Solarpack, Realflo, Telepace, Telebus, SCADAServer, and Modbus are trademarks and the property of Schneider Electric SE, its subsidiaries and affiliated companies. All other trademarks are the property of their respective owners.

Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Address

Schneider Electric
Telemetry & Remote SCADA Solutions
415 Legget Drive, Suite 101, Kanata, Ontario K2K 3R1 Canada
Direct Worldwide: +1 (613) 591-1943
Fax: +1 (613) 591-1022
Toll Free within North America: 1 (888) 267-2232
www.schneider-electric.com

Table of Contents

Technical Support.....	6
Technical Support: Americas, Europe, Middle East, Asia	6
Technical Support: Australia	6
Safety Information	7
Important Information	7
Please Note.....	8
Before You Begin	8
Operation and Adjustments	8
Acceptable Use	9
About The Book	10
At a Glance	10
Document Scope.....	10
Validity Notes	10
Product Related Information	10
User Comments	10
Overview	11
Quick Start Guide	12
Install 5913 Serial Adaptor.....	12
Install 5914 USB Adaptor.....	12
Install 5914 USB Adapter Software Driver.....	12
Configure <i>Bluetooth</i> Connection	14
Configure Internal Laptop <i>Bluetooth</i> Connection	20
Configure application	20
Installation.....	22
5913 Installation	22
5913 Serial Port Connections	23
Serial Port Communication Parameters.....	24
5913 Dimensions and LEDs	24
5914 Connection	25
Maintenance	26

Specifications	27
5913	27
General	27
Communications	27
Power Supplies and Power Consumption	28
 Approvals and Certifications	 29
5914	30
General	30
Communications	30

Index of Figures

Figure 1: RJ-45 Connector Pinout	24
Figure 2: 5913 Dimensions	25

Technical Support

Questions and requests related to any part of this documentation can be directed to one of the following support centers:

Technical Support: Americas, Europe, Middle East, Asia

Available Monday to Friday 8:00am – 6:30pm Eastern Time

Toll free within North America 1-888-226-6876

Direct Worldwide +1-613-591-1943

Email supportTRSS@schneider-electric.com

Technical Support: Australia

Inside Australia 1300 369 233

Email au.help@schneider-electric.com

Safety Information

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a Danger or Warning safety message indicates that an electrical hazard exists, which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result** in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **can result** in death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **can result** in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and the installation, and has received safety training to recognize and avoid the hazards involved.

Before You Begin

Do not use this product on machinery lacking effective point-of-operation guarding. Lack of effective point-of-operation guarding on a machine can result in serious injury to the operator of that machine.

WARNING

EQUIPMENT OPERATION HAZARD

- Verify that all installation and set up procedures have been completed.
- Before operational tests are performed, remove all blocks or other temporary holding means used for shipment from all component devices.
- Remove tools, meters, and debris from equipment.

Failure to follow these instructions can result in death or serious injury.

Follow all start-up tests recommended in the equipment documentation. Store all equipment documentation for future reference.

Test all software in both simulated and real environments.

Verify that the completed system is free from all short circuits and grounds, except those grounds installed according to local regulations (according to the National Electrical Code in the U.S.A, for instance). If high-potential voltage testing is necessary, follow recommendations in equipment documentation to prevent accidental equipment damage.

Operation and Adjustments

The following precautions are from the NEMA Standards Publication ICS 7.1-1995 (English version prevails):

- Regardless of the care exercised in the design and manufacture of equipment or in the selection and ratings of components, there are hazards that can be encountered if such equipment is improperly operated.
- It is sometimes possible to misadjust the equipment and thus produce unsatisfactory or unsafe operation. Always use the manufacturer's instructions as a guide for functional adjustments. Personnel who have access to these adjustments should be familiar with the equipment

manufacturer's instructions and the machinery used with the electrical equipment.

- Only those operational adjustments actually required by the operator should be accessible to the operator. Access to other controls should be restricted to prevent unauthorized changes in operating characteristics.

Acceptable Use

SCADAPack controllers and expansion modules are intended for use in monitoring and controlling non-critical equipment only. They are not intended for safety-critical applications.

WARNING

UNACCEPTABLE USE

Do not use SCADAPack controllers and expansion modules as an integral part of a safety system. These devices are not safety products.

Failure to follow these instructions can result in death or serious injury.

CAUTION

EQUIPMENT OPERATION HAZARD

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Use only Schneider Electric software or approved software with Schneider Electric hardware products.

Failure to follow these instructions can result in minor or moderate injury.

About The Book

At a Glance

Document Scope

This manual describes the 5913 Bluetooth adaptor (RJ-45) for controllers and 5914 for Personal Computer (PC) USB port.

Validity Notes

This document is valid for all versions of the 5913 and 5914 modules.

Product Related Information

WARNING

UNINTENDED EQUIPMENT OPERATION

The application of this product requires expertise in the design and programming of control systems. Only persons with such expertise should be allowed to program, install, alter and apply this product.

Follow all local and national safety codes and standards.

Failure to follow these instructions can result in death or serious injury.

User Comments

We welcome your comments about this document. You can reach us by e-mail at supportTRSS@schneider-electric.com.

Overview

Bluetooth is a global standard communications method that enables data to be exchanged wirelessly between electronic devices. The products described in this user manual, the 5913 *Bluetooth* adaptor and the 5914 USB *Bluetooth*, are designed to provide wireless connection between SCADAPack controllers and PCs. This wireless connection replaces direct serial connections which are difficult to create in many field installations.

The 5913 connects directly to a serial port on a SCADAPack controller using one of the two serial cables that are available. Operating power for the 5913 is provided by the serial port on the SCADAPack controller. The 5913 is shipped from the factory as a discoverable *Bluetooth* slave device.

The 5914 is a Universal Serial Bus (USB) Bluetooth transceiver. Operating power is provided through the USB interface. The 5914 is shipped with a CD containing the Bluetooth USB Adapter Software Driver. The 5914 connects to a PC or laptop and operates as a Bluetooth master when communicating with the 5913.

While this user manual describes the configuration and operation of 5913 in conjunction with the 5914, the 5913 may be used with any compatible Bluetooth device, such as an internal Bluetooth transceiver on a PC or laptop.

The features of the 5913 include:

Wireless communications module certified to Bluetooth® ver2.0.

Integrated software stack, profiles, and AT modem like commands.

The 5913 can be configured and controlled through simple ASCII strings over the Bluetooth RF link.

Serial port (UART) baud rate speeds: 1200bps up to 921.6Kbps.

Bluetooth Class 1: +100 meter (330 feet) distance.

Software adjustable transmitter power from short to long range applications

FHSS (Frequency Hopping Spread Spectrum), encryption and 16 alphanumeric Personal Identification Number (PIN) and error correction schemes for packet delivery.

The 5913 Bluetooth adaptor requires 5VDC for operation. The SCADAPack controller supplies this voltage through the serial port. This requirement prohibits the Bluetooth adaptors from being used with SCADAPack transmitters or any device that does not supply the 5VDC through the serial port.

Quick Start Guide

This section of the manual will lead you through the steps necessary to establish a Bluetooth connection between your PC and a target controller. PC applications such as Realflo, Telepace and IEC 61131-1 will then be able to use the Bluetooth connection in a similar manner as a direct serial connection.

If you are using a laptop with a built in Bluetooth adapter the 5914 USB Adapter software driver is not required.

The Quick Start procedure includes the following items:

- Install 5913 module at the SCADAPack.
- Install 5914 USB.
- Install 5914 USB Adapter Software Driver.
- Establish Bluetooth Connection between 5913 and 5914.
- Establish Bluetooth Connection using internal Bluetooth on laptop.
- Configure applications such as Telepace and Realflo to use the Bluetooth connection.

Install 5913 Serial Adaptor

The installation of the 5913 involves making a serial cable connection to a SCADAPack controller. There are two types of serial connector used on SCADAPack products RJ-45 and DE9S. Both serial cable types are shipped with the 5913. For further details on the cables and SCADAPack controller serial ports see section **5913 Installation**.

Install 5914 USB Adaptor


The 5914 (USB) is installed by plugging the unit into an available USB slot on your PC. When properly connected to a USB port the blue indicator led on the 5914 USB *Bluetooth* will be on.

Install 5914 USB Adapter Software Driver


The software driver is installed from the CD ROM that came with the 5914. This CD contains the WIDCOMM Bluetooth Software. The installation will automatically start and open the Setup Program splash screen.

The 5914 is **NOT** supported on Windows Server 2003 operating system.

Click the *Next* button to start the Installation Wizard. The Installation Wizard will guide you through the installation.

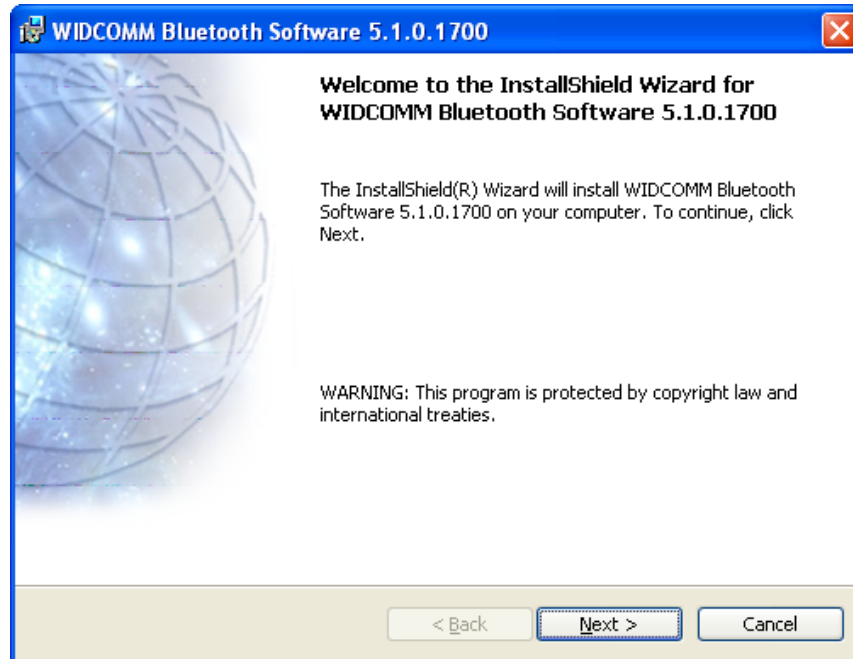

The Bluetooth configuration is now complete. You may click *Finished* and begin to discover the available devices.

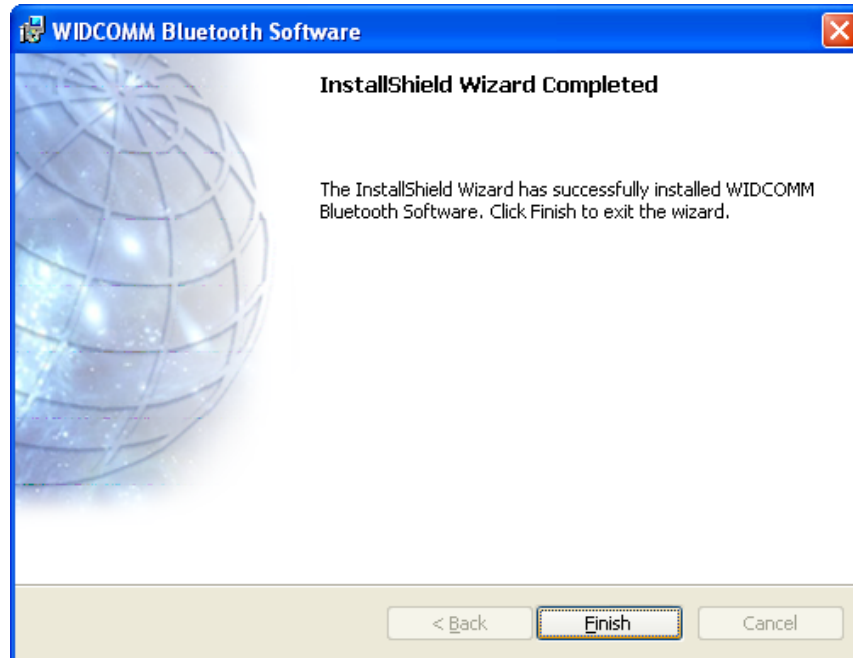

Configure *Bluetooth* Connection


The My Bluetooth Places - Bluetooth Neighborhood can be located in the Windows **Start >> All Programs >> My Bluetooth Places**.

The available devices will automatically discover in the Entire Bluetooth Neighborhood. The serial number of the 5913 Serial Adapter is displayed as the device name. (The adapters listed will be the *Bluetooth* devices within range, approximately 300 feet.)

Click the Next button to begin the Initial Bluetooth Configuration Wizard. The Configuration Wizard will guide you through the configuration process.




When prompted with the Bluetooth Service Selection, select Bluetooth Serial Port to allow remote Bluetooth devices to connect to the computer.

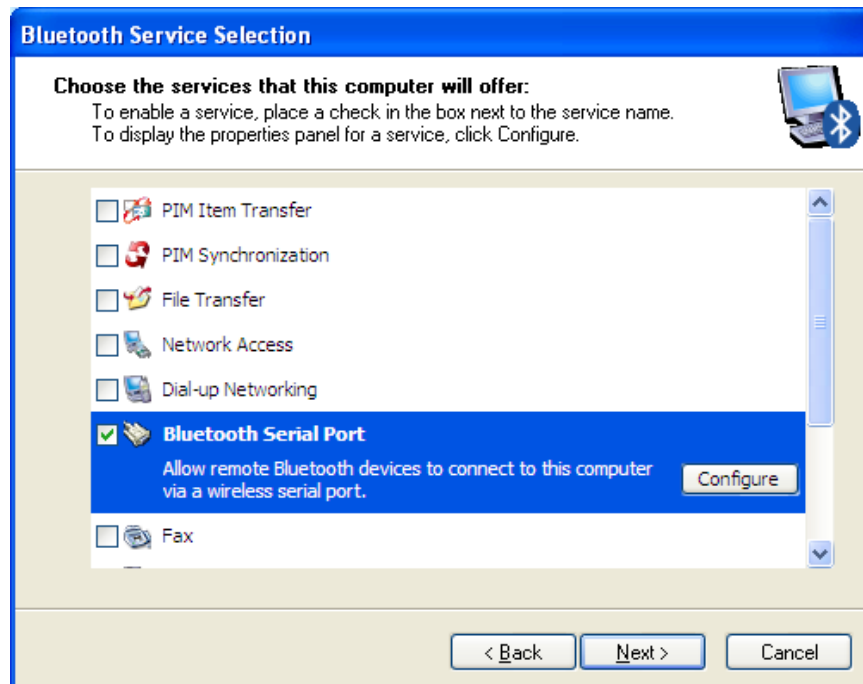


Click the *Next* button to configure any active Bluetooth devices or click the *Skip* button to setup the connections later.



Select the device you would like to configure and click the *Next* button.

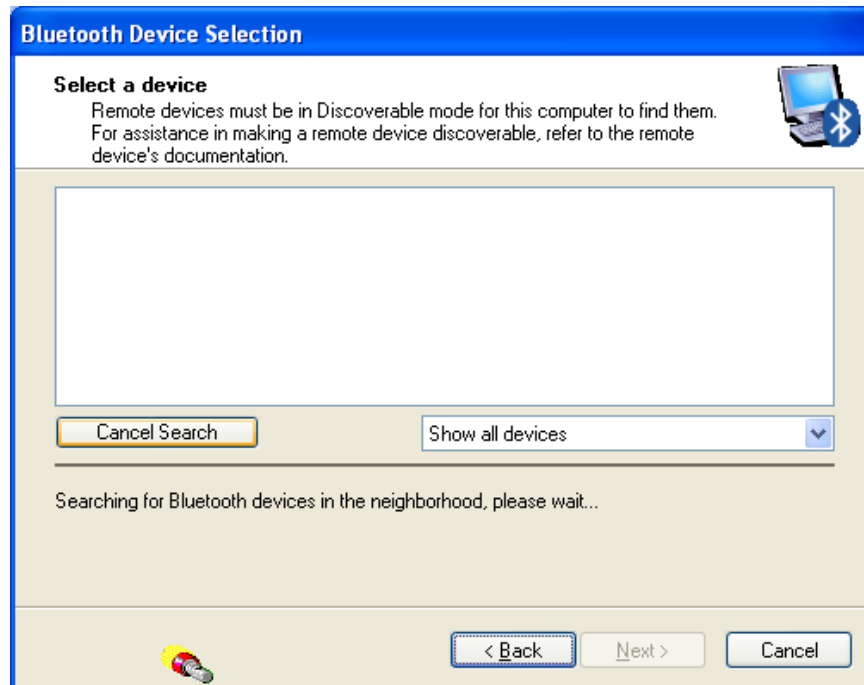

Enter the Bluetooth security code and click the *Pair Now* button. (Security Code: default)

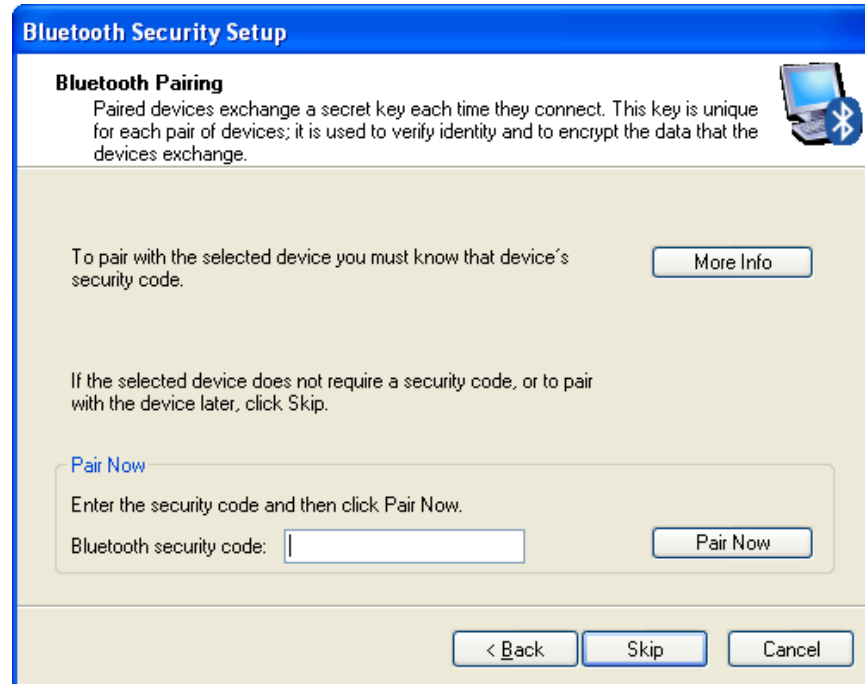

Bluetooth Security Setup

Bluetooth Pairing
Paired devices exchange a secret key each time they connect. This key is unique for each pair of devices; it is used to verify identity and to encrypt the data that the devices exchange.

To pair with the selected device you must know that device's security code. [More Info](#)

If the selected device does not require a security code, or to pair with the device later, click Skip.

[Pair Now](#)


Enter the security code and then click Pair Now.

Bluetooth security code:

[Pair Now](#)

[< Back](#) [Skip](#) [Cancel](#)

Select the virtual serial connection and click the *Configure* button.

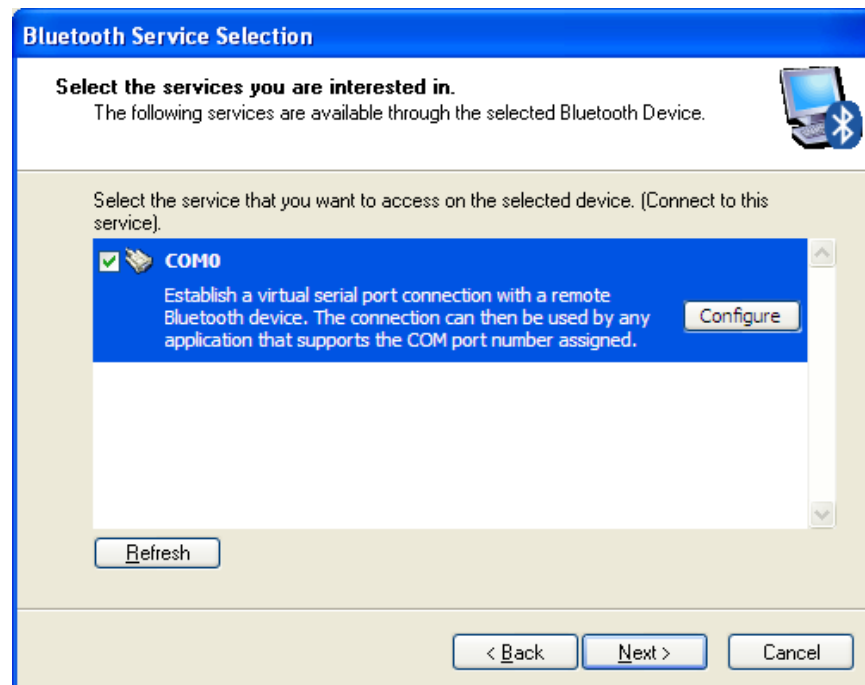

Bluetooth Service Selection

Select the services you are interested in.
The following services are available through the selected Bluetooth Device.


Select the service that you want to access on the selected device. (Connect to this service).

☒ **COM0**
Establish a virtual serial port connection with a remote Bluetooth device. The connection can then be used by any application that supports the COM port number assigned. [Configure](#)


[Refresh](#)

[< Back](#) [Next >](#) [Cancel](#)


The COM Port selected will be the virtual serial connection on the computer. This is the port you will need to select when setting the **PC Communication Settings** in your application.

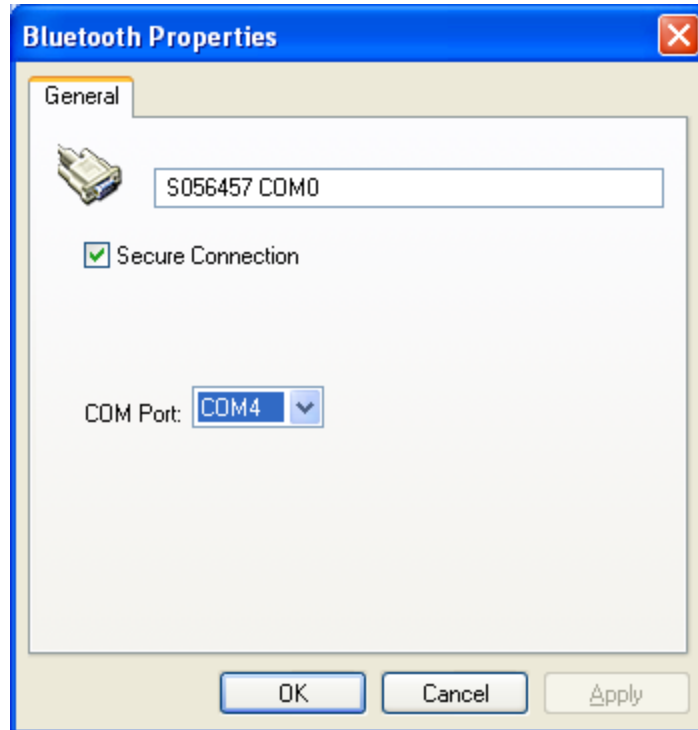

Click the *Finish* button to complete the Bluetooth Setup wizard.

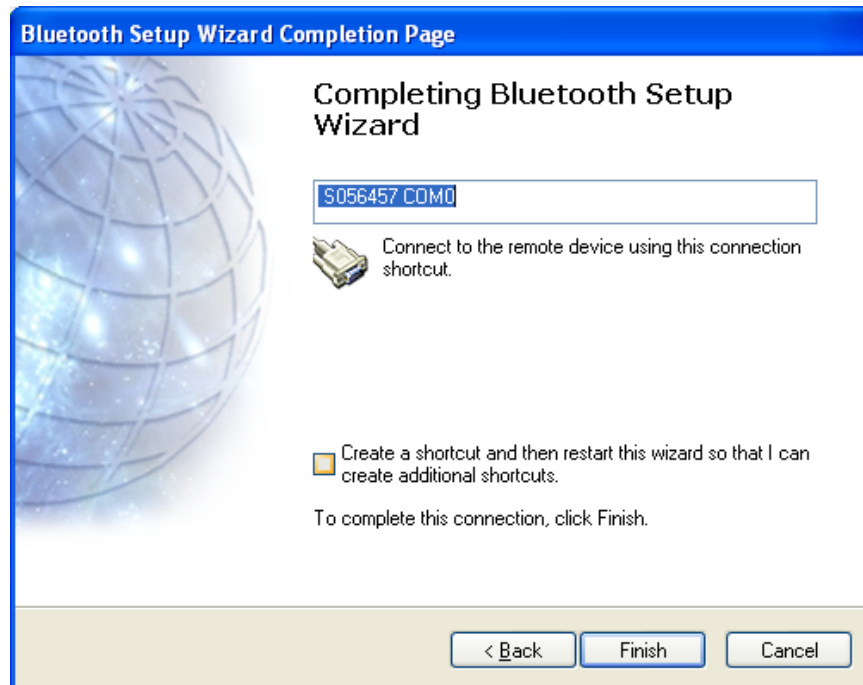

The *Bluetooth* connection is now ready for applications.

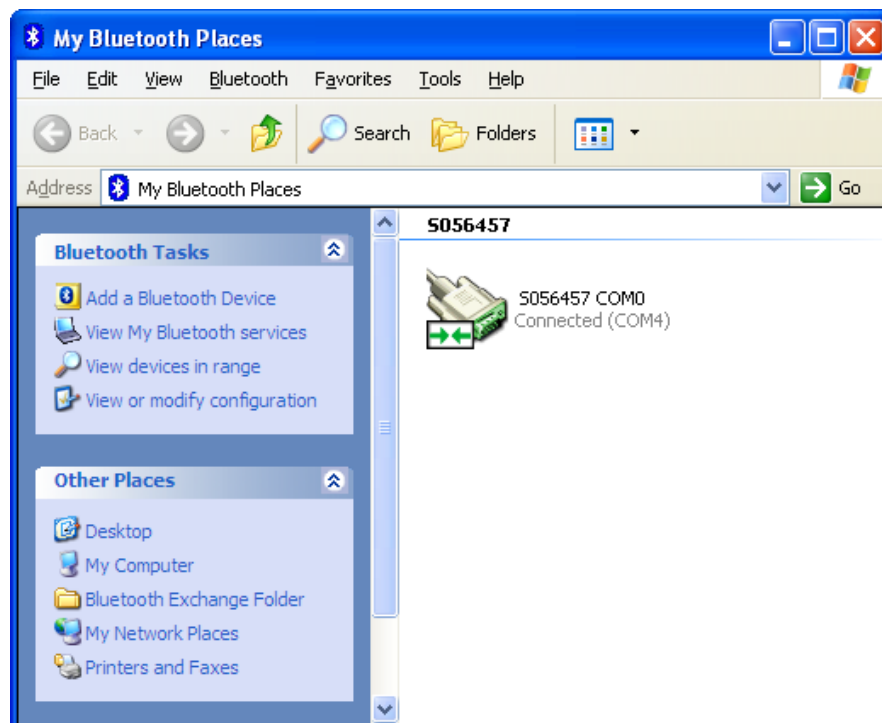


Configure Internal Laptop *Bluetooth* Connection

If your laptop or PC has an internal *Bluetooth* adapter you can use it to establish a *Bluetooth* connection with the 5913. Refer to your user manual for details on establishing a *Bluetooth* connection.


If the 5913 is used with a laptop using a built-in class 2 *Bluetooth* device, the range will be limited by the class 2 device (approximately 3m or 10 ft.)

The internal Bluetooth may not be set up for automatic discovery. This needs to be enabled in your configuration software. An example of the correct setting is shown in the figure below.

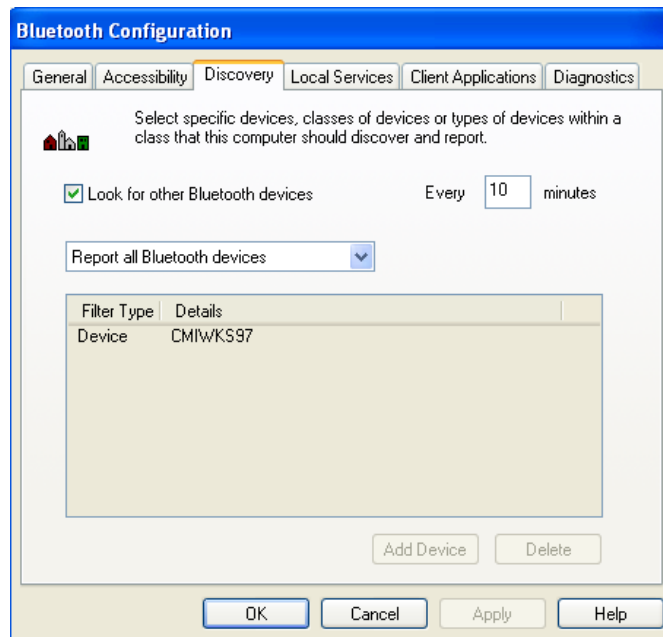

Configure application

Schneider Electric software applications may be configured to use a *Bluetooth* connection to communicate with a target SCADAPack controller. Communication parameters for the communication link between a PC and A SCADAPack controller are set using the PC Communication Setting dialog. The PC Communication dialog for Realflo is shown below.

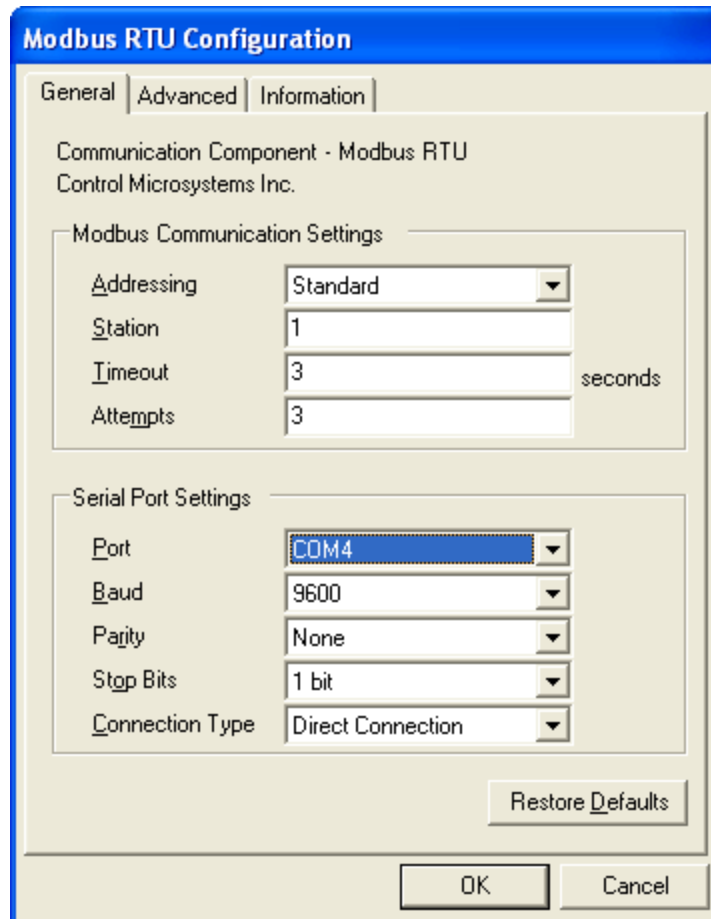

The image shows a 'Modbus RTU Configuration' dialog box with three tabs: 'General', 'Advanced', and 'Information'. The 'General' tab is selected. It contains two main sections: 'Modbus Communication Settings' and 'Serial Port Settings'. In the 'Modbus Communication Settings' section, 'Addressing' is set to 'Standard', 'Station' is '1', 'Timeout' is '3' seconds, and 'Attempts' is '3'. In the 'Serial Port Settings' section, 'Port' is 'COM4', 'Baud' is '9600', 'Parity' is 'None', 'Stop Bits' is '1 bit', and 'Connection Type' is 'Direct Connection'. There is a 'Restore Defaults' button at the bottom right of the settings area, and 'OK' and 'Cancel' buttons at the very bottom.

Section	Parameter	Value
Modbus Communication Settings	Addressing	Standard
	Station	1
	Timeout	3 seconds
	Attempts	3
Serial Port Settings	Port	COM4
	Baud	9600
	Parity	None
	Stop Bits	1 bit
	Connection Type	Direct Connection

The factory default serial settings for the 5913 are 9600 baud, 8 data bits, no parity and 1 stop bit. COM4 is the virtual serial port created during the installation of the 5914 USB software driver.

Bluetooth connections will be disconnected if an attempt to create a New Connection is made when the 5913 is connected.

Installation

5913 Installation

The installation of the 5913 involves making a serial connection to a SCADAPack controller. The 5913 has a single RJ-45 serial connector as shown in *Figure 2: 5913*. Depending on the SCADAPack controller you are connecting to use one of the two serial cables available to connect the 5913 to the SCADAPack.

The 5913 is supplied with serial cable RJ-45 to RJ-45 (part number TBUM297303). Cable RJ-45 to DE9S (part number TBUM297304) may be ordered separately. These cables are two feet long. Longer cables have the potential to introduce noise on the serial port and result in very poor communications.

The 5913 is powered through the serial port when connected to a SCADAPack controller. The connection description for SCADAPack controllers and integrated I/O boards are listed below:

SCADAPack and Micro16 Controllers

- The 5913 may be connected to RS-232 ports COM1 or COM2.
- Use the RJ-45 to DE9S cable (part number TBUM297304).

SCADAPack LP

- When connecting to COM 2 on the SCADAPack LP jumper J13 needs to be connected.
- The 5913 may be connected to COM3.
- Use the RJ-45 to RJ-45 cable (part number TBUM297303).

SCADAPack 100

- When connecting to COM1 on the SCADAPack 100 jumper J5 needs to be connected.
- When connecting to COM2 on the SCADAPack 100 jumper J6 needs to be connected.
- Use the RJ-45 to RJ-45 cable (part number TBUM297303).

SCADAPack 330/334

- When connecting to COM1 on the SCADAPack 330 jumper J8 needs to be in the **RS-232** position and jumper J7 needs to be in the **+5V** position. Use the RJ-45 to RJ-45 cable (part number TBUM297303).

- When connecting to COM2 on the SCADAPack 330 jumper J10 needs to be in the **RS-232** position and jumper J7 needs to be in the **+5V** position.. Use the RJ-45 to RJ-45 cable (part number TBUM297303).
- When connecting to COM3 on the SCADAPack 330 jumpers J11 and J12 needs to be in the **Normal** position. Use the RJ-45 to RJ-45 cable (part number TBUM297303).
- Use the RJ-45 to RJ-45 cable (part number TBUM297303).

SCADAPack 350

- When connecting to COM2 on the SCADAPack 350 jumper J13 needs to be in the **RS-232** position. Use the RJ-45 to RJ-45 cable (part number TBUM297303).
- When connecting to COM3 on the SCADAPack 350 jumpers J15 and J16 needs to be in the **Normal** position. Use the RJ-45 to RJ-45 cable (part number TBUM297303).
- Use the RJ-45 to RJ-45 cable (part number TBUM297303).

SCADAPack 32

- When connecting to COM1 on the SCADAPack 32 jumper J4 (Com Port 5V) needs to be connected. And jumper J10 must be in the **RS-232** position.
- When connecting to COM2 on the SCADAPack 32 jumper J4 (Com Port 5V) needs to be connected.
- When connecting to COM4 on the SCADAPack 32 jumper J4 (Com Port 5V) needs to be connected.

5601 and 5602 I/O Modules

- The 5913 may be connected to COM3.
- Use the RJ-45 to DE9S cable (part number TBUM297304).

5604 I/O Module

- The 5913 may be connected to COM3.
- Use the RJ-45 to RJ-45 cable (part number TBUM297303).

5913 Serial Port Connections

The following diagram shows the pin connections for the RS-232 (RJ-45 Modular Jack) port connector for the 5913.

RJ-45 Modular Jack

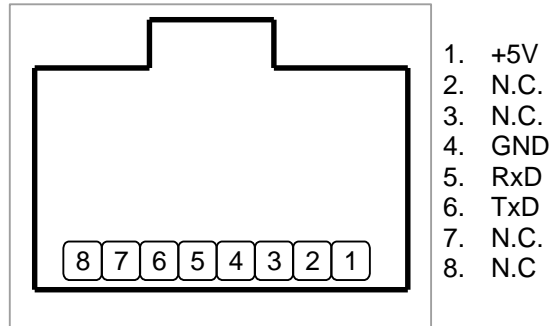


Figure 1: RJ-45 Connector Pinout

Pin	Function	Description
1	5V	Input +5V supplied by the SCADAPack controller.
4	GND	System ground.
5	RxD	Input 0 to 5V signal levels
6	TxD	Output 0 to 5V signal levels

Serial Port Communication Parameters

The serial port on the 5913 module is set for **9600** baud, **8** data bits, **no** parity and **1** stop bit at the factory. These setting may be viewed or changed using the AT commands described in the 5913 AT Command Appendix.

5913 Dimensions and LEDs

The dimensions of the 5913 are shown in **Figure 2: 5913** below.

The Blue LED indicates that a *Bluetooth* connection is made with another *Bluetooth* device.

The Green LED indicates that the 5913 is powered by a 5VDC source.

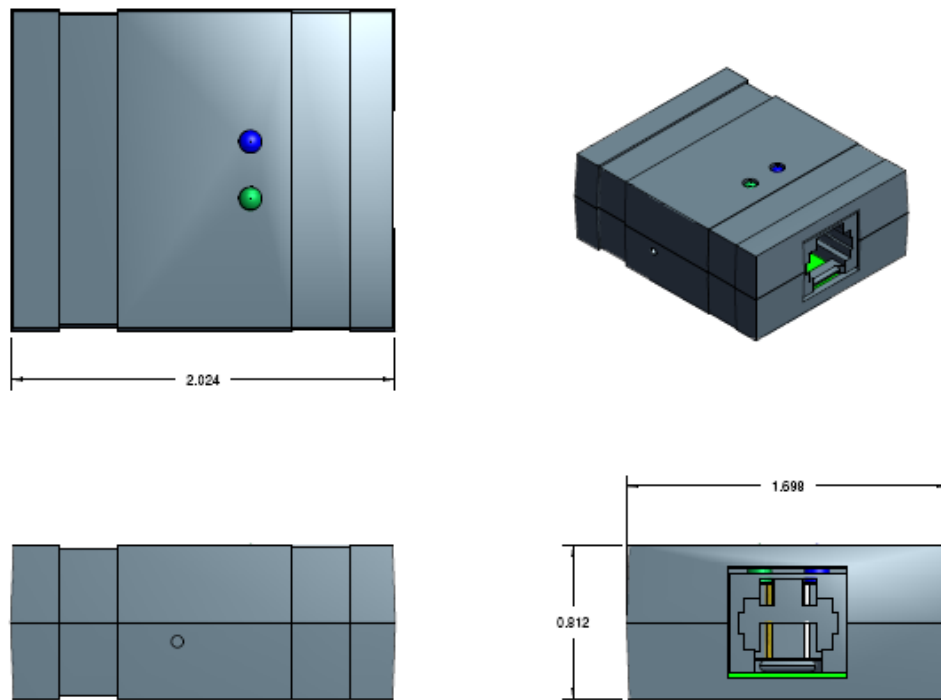


Figure 2: 5913 Dimensions

5914 Connection

The 5914 connects directly to a USB port on a laptop or PC. The 5914 cannot be connected to the USB ports on SCADAPack 300 controllers.

Maintenance

This module requires no routine maintenance. If the module is not functioning correctly, contact [Schneider Electric Technical Support](#) for more information and instructions for returning the module for repair.

Specifications

Disclaimer: Schneider Electric reserves the right to change product specifications. For more information, visit <http://www.schneider-electric.com>.

5913

General

Terminations	8 pin modular jack
Dimensions	2.02 inch (51 mm) 1.70 inch (43 mm) 0.81 inch (21 mm)
Mounting	Velcro mounting supplied.
Environment	–40°C to 70°C (–40°F to 158°F) operation and storage

Communications

General	Radio modem compatible with Bluetooth® enabled devices. Frequency Hopping Spread Spectrum. Encryption, PIN identification and Error Correction.
Frequency	2.402 to 2.48 GHz. (ISM 2.4GHz band.)
Channels	79 at 1MHz. intervals
Distance	Class 1: 100m (330 ft.) When the 5913 is used with a <i>Bluetooth</i> device that is Class 2 the maximum distance achieved will be approximately 3m or 10 ft. (Class 2)
Receive Sensitivity	–83dBm typical
Transmit Power	12dBm max. (software adjustable)
Antenna	Integrated chip antenna
Host side	TxD and RxD implemented

Power Supplies and Power Consumption

Voltage Requirements	5V supplied by the controller Pin 9 on the 5913-D. Pin 1 on 5913-J.
Current Requirements	80mA transmit 40mA receive 1.4mA idle mode 30uA deep sleep 120mA worst case peak

Approvals and Certifications

Hazardous Locations - North America	Suitable for use in Class I, Division 2, Groups A, B, C and D Hazardous Locations. Temperature Code T4 CSA certified to the requirements of: <ul style="list-style-type: none">• CSA Std. C22.2 No. 213-M1987 - Hazardous Locations.• UL Std. No. 1604 - Hazardous (Classified) Locations.
Safety	CSA (cCSAus) certified to the requirements of: CSA C22.2 No. 142-M1987 and UL508. (Process Control Equipment, Industrial Control Equipment) <ul style="list-style-type: none">• UL (cULus) listed: UL508 (Industrial Control Equipment)
Digital Emissions	FCC 47 CFR Part 15, Subpart B, Class A Verification EN61000-6-4: 2001 Electromagnetic Compatibility Generic Emission Standard Part 6-4: Industrial Environment.
Immunity	EN61000-6-2: 2001 Electromagnetic Compatibility Generic Standards Part 6-2: Immunity for Industrial Environments
Declaration	This product conforms to the above Emissions and Immunity Standards and therefore conforms with the requirements of Council Directive 2004/108/EC (as amended) relating to electromagnetic compatibility and is eligible to bear the CE mark. The Low Voltage Directive is not applicable to this product.

5914**General**

Terminations and Mounting	USB Connection
Dimensions	1.8 inch (47 mm) 0.67 inch (17 mm) 0.33 inch (8.5 mm)
Environment	0°C to 50°C (32°F to 122°F) operation -20°C to 70°C (-4°F to 158°F) storage

Communications

General	Radio modem compatible with Bluetooth® enabled devices. Frequency Hopping Spread Spectrum. Encryption, PIN identification and Error Correction.
Frequency	2.402 to 2.48 GHz. (ISM 2.4GHz band.)
Channels	79 at 1MHz. intervals
Distance	Class 1: 100m (330 ft.)
Receive Sensitivity	< 0.1%BER at -70dBm typical
Transmit Power	Class 1
Antenna	Printed antenna

Distributed by:888.858.3647 | relevantsolutions.com